 


14+

2.4G 6轴陀螺仪全方位 遥控四轴飞行器

2.4G 6-AXIS GYRO QUADCOPTER

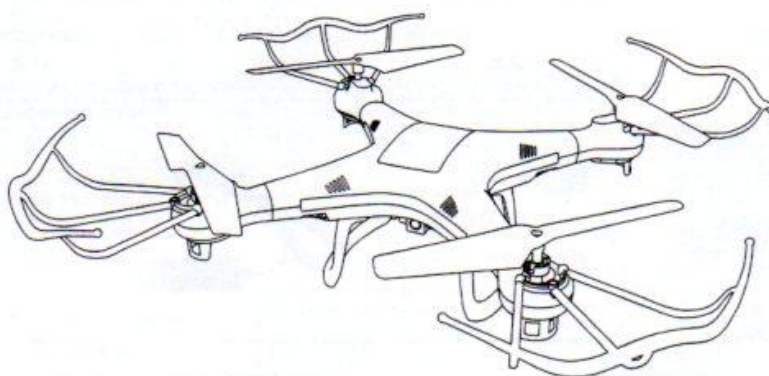

INSTRUCTION manual 使用说明书

Contents				
1	INTRODUCTION 前言	4	CHARGING BATTERIES 电池的充电	9~10 PARTS LIST 各种零件名称
1~2	SAFETY NOTES 安全注意事项	5	BINDING OF RADIO TRANSMITTER AND RECEIVER 遥控器与接收器的对频	
3	NOMENCLATURE 遥控器各部位名称	6~7	FLIGHT ADJUSTMENT AND SETTING 飞行动作调整与设定	
4	TRANSMITTER BATTERY INSTALLATION 遥控器电池安装	8	TROUBLE SHOOTING DURING FLIGHT 如何排除飞行中的状况	

1. INTRODUCTION 前言




Thanks for using products. Helicopter is the first helicopter which can fly outdoor in a wild weather. In order to play Helicopter more convenient and easy, please read it carefully before playing the helicopter. Meanwhile, please keep it well, and take it for reference when adjustment and maintenance.

感谢您选购该产品！这是一台能在较小空间及室外飞行的4轴飞行器。为了让您更方便，更容易操控飞行器，请您仔细阅读完此说明书后，再操作这台飞行器，同时请您妥善保管这本说明书，作为日后调整及维修的参考。

flight vehicle can satisfy you whatever rainy or sunny, even when outdoor wild grade 3-4, it will keep moving.

飞行器，无论何时何地，不管晴天雨天，包括室外风力不大于3-4级，都可以满足您对飞行的渴望。

WARNING LABEL LEGEND 标志代表涵义

 WARNING 警告	Mishandling due to failure to follow these instructions may result in damage or injury. 因为疏忽这些操作说明，而使用错误可能造成财产损失或严重伤害。
 CAUTION 注意	Mishandling due to failure to follow these instructions may result in danger. 因为疏忽这些操作说明，而使用错误可能造成危险。
 FORBIDDEN 禁止	Do not attempt under any circumstances. 在任何禁止的环境下，请勿尝试操作。

IMPORTANT NOTES 重要声明

Helicopter is not a toy, miniature remote control four-axis aircraft, but there is still some risk of the matter with instructions to correctly use the model in accordance with the Security, the dismantling of any modification or improper use of the product are not familiar with may be dangerous to the risk of unexpected or accidental, please do not overlook.

四轴飞行器并非玩具，虽然是遥控四轴飞行器，但是仍然有一定的危险性，请您依安全注意事项与操作说明来正确的使用该模型，任意的改装拆解或使用不当以及产品的不熟悉，都可能造成不可预期的危险或意外，请勿轻忽。

Manufacturer and dealer assume no liability for accidental damages by abnormal wear of parts, improper assembly, or operation in unsafe manners. This product is intended for use by age 15 years or older. Please ensure the product is operated under safe environment.

 
注意！任何遥控飞行器的使用，制造商或经销商是无法对使用者于零件使用的损耗异常，组装不当或不安全的环境操作所发生的意外负任何责任，本产品适用年龄15岁以上，请确保在安全无虞的环境下操作，产品售出后本公司不负责因不当操作/拆卸/改装所引起的财产损失与人身伤害。

We recommend that you seek the assistance of an experienced pilot before attempting to fly our products for the first time. A local expert is the best way to properly assemble, setup, and fly your model for the first time.

The requires a certain degree of skill to operate, and is an item subject to normal wear and tear. Any damage or dissatisfaction as a result of accidents or modifications are not covered by any warranty and cannot be returned for repair or replacement. Please contact our distributors are not covered by any warranty and cannot discounted rates when you experience problems during operation or maintenance.

模型商品属于需高操作技术且为消耗性商品，如经拆装使用后，会造成不同情况零件损耗，任何使用情况所造成商品不良或不同意，将无法于保修条件内更换新品或退货，如遇有使用操作维修问题，本公司全省分公司或代理将提供技术指导，特价零件供应服务。

2. SAFETY NOTES 安全注意事项



Fly inly unsafe areas away from other people. Do not operate R/C aircraft within the vicinity of crowds or people. R/C aircraft are prone to accidents, failures, and responsible for their actions and damage or injury occurred during pilot error, and radio interference. Pilots are responsible for their actions and damage or injury occurred during the operation or as a result of R/C aircraft models.

遥控模型，四轴飞行器属于危险性商品，飞行时务必远离人群，人为组装不当或机件损坏，电子控制设备不良，以及操控上的不熟悉，都有可能造成飞行失控损伤等不可预期的意外，请飞行者务必注意飞行安全，并需了解自我疏忽所造成任何意外之责。



Special despecial design for indoor & taloor, please keep it away from obstacle
室内、室外专用机，请远离障碍物


This product is suitable for indoor and outdoor (the wind grade should be no more than 4), please choose a place without obstacle, and keep distance from crowd and pets, don't play it under unsafe, for instance, heat source, wire or electronic power source, in order not to be damaged by collision landing, entanglement and lead to a fire, electric shock and cause losses of lives and property

本产品适合室内、室外（包括室外风力不要大于4级）环境飞行的遥控飞行器，飞行时请妥善选择无障碍的室内、室外场地，并与人群或宠物等，保持适当距离，切勿于不安全的环境下操作，如热源、电线、电源等等，以免飞行器碰撞、迫降、纠缠而引起火灾、电击等危险，造成生命财产损失。



<p>FORBIDDEN 禁止</p>	<p>PREVENT MOISTURE 远离潮湿环境</p> <p>R/C models are composed of many precision electrical components. It is critical to keep the model and associated equipment away from moisture and other contaminants. The introduction or exposure to water or moisture in any form can cause the model to malfunction resulting in a crash. Do not operate or expose to rain or moisture.</p> <p>飞行器内部也是由许多精密的电子零件组成，所以必须绝对的防止潮湿或水汽，避免在浴室或雨天时使用，防止水汽进入机身内部而导致机件及电子零件故障而引发不可预期的意外！</p>	
<p>FORBIDDEN 禁止</p>	<p>PROPER OPERATION 勿不当使用本产品</p> <p>To avoid potential fire hazard from batteries, please do not short, reverse polarity, or puncture batteries. Battery charging must be done under supervision at all times, and at location out of reach by children. Double check the four AA batteries are rechargeable Ni-CD/MH batteries before charging. The manufacturer of this product will not be liable for accidental damages incurred by charging non-rechargeable batteries.</p> <p>请勿任意拆卸或任意改造加工。任何的升级改造或维修，请使用产品目录的零件，以确保结构的安全。请确认于产品界限内操作。请勿过载使用，并勿用于安全法令外其它非法用途。</p>	
<p>FORBIDDEN 禁止</p>	<p>SAFETY NOTE FOR NI-MH BATTERIES 镍氢电池使用安全</p> <p>Make sure the batteries are installed based on polarity indicated in the case and do not mix batteries of different chemistry/spec. Please take out the batteries if you are not going to use for a long time to avoid potential leakage which may damage the transmitter. Please dispose depleted batteries according to local laws and ordinances. Do not dispose improperly.</p> <p>安装时请确认正负极位置，新旧电池请勿同时混用以影响电池寿命。若长时间不使用本产品，请取出电池，以免造成电池漏液、故障。若电池有漏液状况请勿使用。废弃的电池，请依照该使用国家或地区的废弃物清理法令回收，切勿任意丢弃以免污染环境。</p>	
<p>FORBIDDEN 禁止</p>	<p>SAFETY NOTE ON LI-POLYMER BATTERIES 锂聚合物电池使用安全</p> <p>Li-Polymer batteries poses higher operational risks compared to other battery chemistry, thus it is imperative to follow its usage instructions. Manufacturer and dealer assume no liability for accidental damages caused by improper usage. Do not use charger other than the factory supplied unit to avoid potential fire and explosion. Do not crush, disassemble, burn, and reverse polarity. Avoid metallic materials to come into contact with battery's polarity and cause it short and never puncture batteries to avoid fire hazards.</p> <p>Battery charging must be done under supervision at all times, and at location out of reach by children. Please stop the use or charge of the battery should there be an unusual increase in battery temperature after use. Continue use of this battery may cause it to expand, deform, explode, or even result in fire hazards. Please dispose depleted batteries according to local laws and ordinances. Do not dispose improperly.</p> <p>锂聚合物电池较其它电池有更高的危险性，使用前请务必详读并遵照下列注意事项使用本电池，本公司将不对任何不当使用所造成的损害负责。</p> <p>严禁使用原厂以外的充电器进行充电，以免发生爆炸起火的危险。</p> <p>严禁撞击、拆解、正负极反接、焚烧电池，避免金属物品碰触电池正负极造成短路，并防止尖锐的物品刺穿电池，以避免电池起火的危险。</p> <p>充电时请谨慎小心，确保在您的视线范围内进行充电，并远离幼童可以接触的地方，以免发生危险。</p> <p>电池使用后如有发热情况，严禁充电。否则会造成电池膨胀、变形、爆炸甚至起火燃烧，危害生命财产的安全。</p> <p>废弃的电池，请严格依照该使用国家或地区的废弃物清理法令回收，以免污染环境。</p>	
<p>CAUTION 注意</p>	<p>KEEP AWAY FROM HEAT 远离热源</p> <p>R/C models are made of various forms of plastic. Plastic is very susceptible to damage or deformation due to extreme heat and cold climate. Make sure not to store the model near any source of heat such as an oven, or heater. It is best to store the model indoors, in a climate-controlled, room temperature environment.</p> <p>飞行器多半是以PA纤维或聚乙烯、电子商品为主要材料，因此要尽量远离热源、日晒，以避免因高温而变形甚至溶毁损坏的可能。</p>	
<p>WARNING 警告</p>	<p>OBTAIN THE ASSISTANCE OF AN EXPERIENCED PILOT 避免独自操控</p> <p>The products are suitable for more than 15 years old age. At the beginning it will have some certain difficulty in learning, suggestion guidance by experienced when playing.</p> <p>本产品适用年龄15岁以上。遥控四轴飞行器在学习初期有着一定难度，建议要有经验的人士在旁指导才可以飞行。</p>	

 
3.NOMENCLATURE 遥控器各部位名称

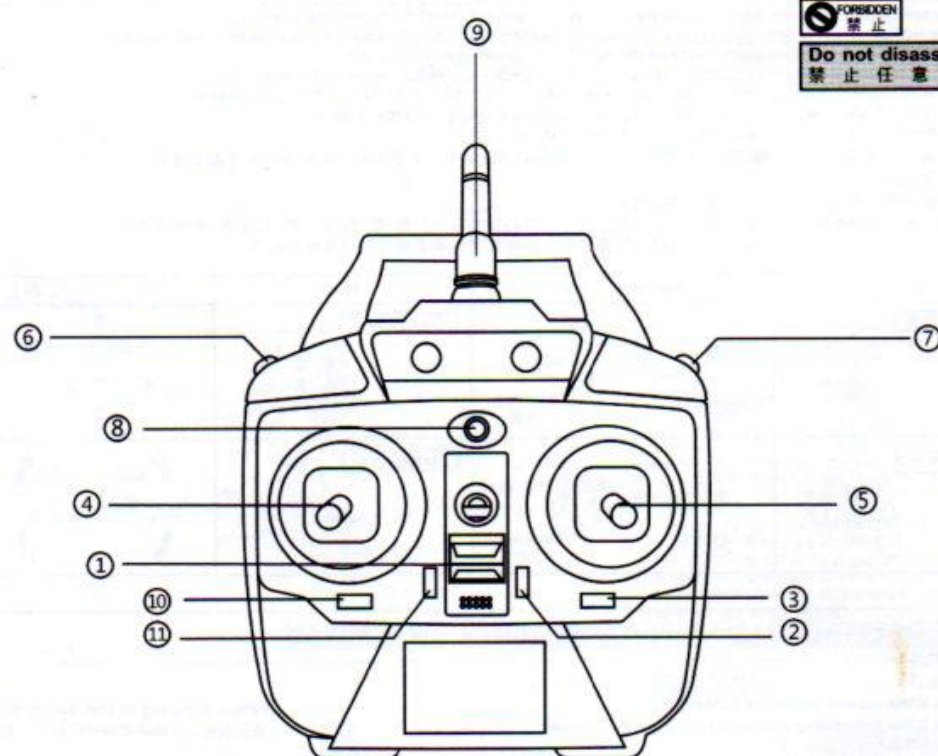


1. 电源开关
2. 前后微调
3. 左右微调
4. 油门控制杆 (上升/下降 左/右转向)
5. 方向控制杆 (前后/侧飞)
6. 返航键 (航向锁定键)
(无头模式: 短按一下进入无头模式, 再短按一下取消无头模式)
(一键返航: 长按进入一键返航, 再任意拨动右手摇杆将取消一键返航)
(航向锁定后, 前后左右方向不随着机身转向而变动, 机身不分前后左右, 无论机头方向, 前后左右航向永远是锁定时的方位, 此功能可在分不清航向紧急时召回飞行器)
7. 翻滚按键
8. 电源指示灯
9. 天线
10. 快慢键
11. 拍照/摄像

1. Power switch
2. Before trimming
3. About trimming
4. Throttle lever (Rise / fall Left / right turn)
5. Direction lever (Front / side fly)
6. Return key (heading lock key)
(Headless mode: short click into the headless mode, and then a short press the Cancel headless mode)
(A key return: Press to enter a key return, then any right joystick to cancel a toggle key return)
(After the course locked, the direction is not around, and change with the steering body, the body, regardless of all around, regardless of the direction of the nose, is always around, heading azimuth lock This feature can recall the aircraft in an emergency can not tell heading)
7. Rollover buttons
8. Power LED
9. Antenna
10. Speed key
11. Camera / video

 
4. TRANSMITTER BATTERY INSTALLATION 遥控器电池安装

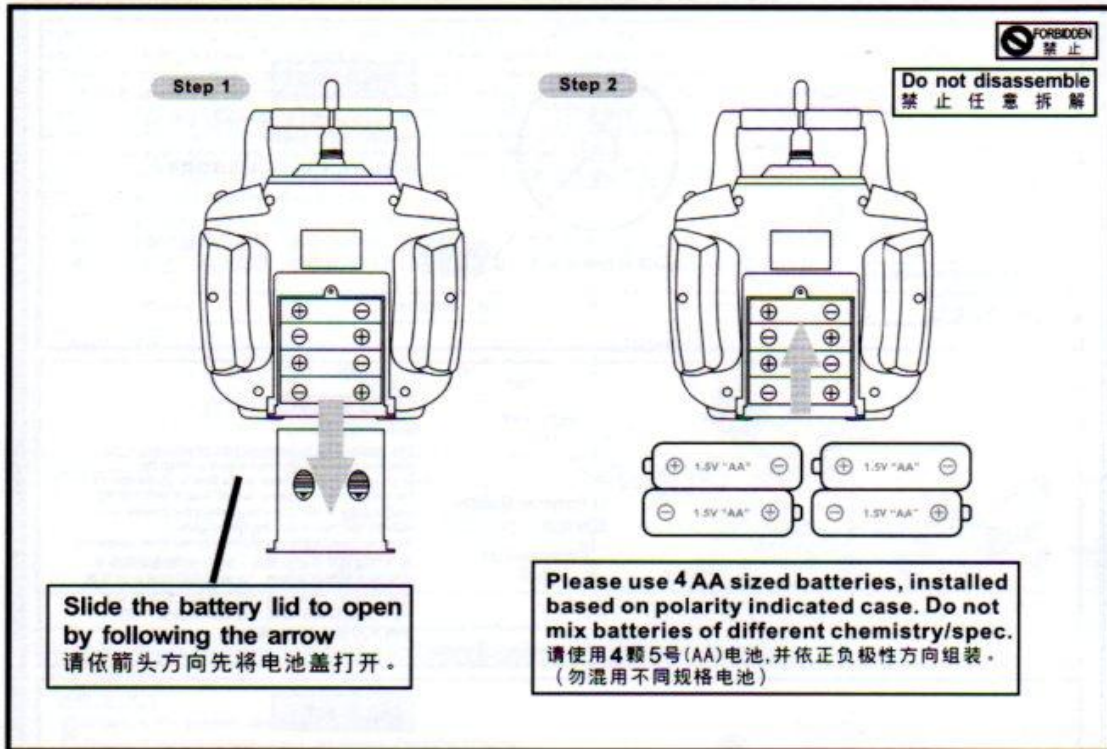

 5. CHARGING BATTERIES 电池的充电

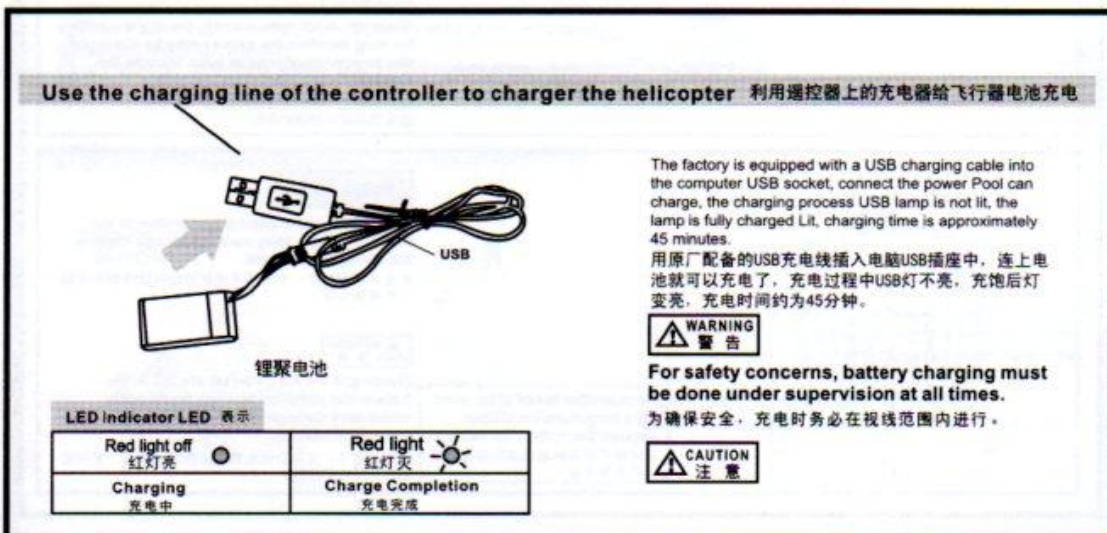

 
6. BINDING OF RADIO TRANSMITTER AND RECEIVER 遥控器与接收器的对频

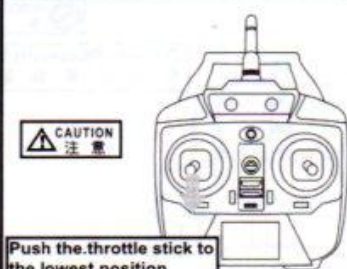

Step 1 步骤 1

The throttle stick to the bottom, turn the remote control power.

 将油门摇杆推至最低，打开遥控器电源。

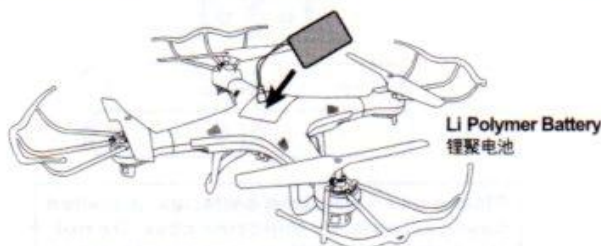

Step 2 步骤 2

The vehicle on a flat position, the Li-PO battery in the direction shown by electrical socket pushed into position, the board flashes at this time not to move the body, so the frequency remote control gyro reading neutral point. 3 seconds after pushing the joystick to the highest, and then pulled the lowest point.

Receiver board lights stop flashing on the code completion. 将飞行器置于平坦位置后，将Li-PO电池依图所示方向推入插槽至定位，主板指示灯闪烁此时不要再移动机身，使遥控器对频与陀螺仪读取中立点。3秒后将摇杆推到最高，然后拉到最低，此时接收板灯停止闪烁对码完成。



Step 3 步骤 3

 
Remove the flight vehicle battery safely at the conclusion of flight. this should be made into a post flight habit to avoid unforeseeable problems.

结束飞行时，请将飞行器电池安全取下，请养成良好习惯以免造成遗憾。



Warning: If left connected in the flight vehicle for long duration, the battery may be damaged due to over-discharge, or even become fire hazards.

电池未取下，将导致电池过度放电而损坏，甚至造成起火燃烧的危险。

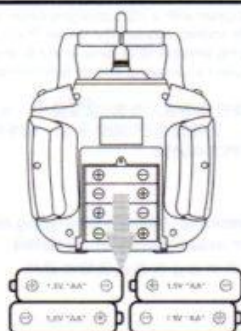

Step 4 步骤 4

Turn off the transmitter. If transmitter is not to be used for a long duration, please remove the battery for storage.

关闭发射器电源，长时间不使用时请将遥控器电池取出并妥善保管。



Warning: If the AA batteries are left in the transmitter, potential leakage could occur which may damage the transmitter, and create fire hazards.

电池未取下，将导致电池漏液而损坏遥控器，甚至造成起火燃烧的危险。

If transmitter is not to be used for a long duration, please remove the battery for storage.
长时间不使用时请将遥控器电池取出并妥善保管。

7 .FLIGHT ADJUSTMENT AND SETTING 飞行动作调整与设定





PLEASE PRE-FLIGHT PROFICIENCY FLIGHT SIMULATION 飞行前请先熟练模拟飞行

Before you are familiar with the flight vehicle, please don't set it fly, read the instruction carefully. Get familiar with all kinds of direction control and keep repeating until you can play it as you perform your wishes.

1. Place the flight vehicle in a clear open field and the tail of helicopter point to yourself.
2. Practice operating the remote control of each rocker (each operation mode of operation as shown), and repeated practice throttle high / low, left / right, front / rear and left / right operation.
3. The simulation flight practice is very important, please keep practicing until the fingers move naturally when you hear operation orders being call out.

在还没有了解飞行器各个动作的操控前，严禁实机飞行，请先阅读说明书，熟悉各种方向的操控并不断的重复，直到手指可熟练的控制各种动作以及方向。

- 1、将飞行器在空旷的地方，并将飞行器背面对准自己。
- 2、练习操作遥控器的各摇杆（各动作的操作方式如下图），并反复练习油门高/低、左/右、前/后及左/右操作方式。
- 3、模拟飞行的练习相当重要，请重复练习直到不需要思索，手指能自然随着喊出的指令移动控制。

Mode	Illustration 图示	Mode	图示
Aileron 副翼		Throttle 油门	
Elevator 升降/前后		Rudder 方向	

FLIGHT ADJUSTMENT AND NOTICE FOR BEGINNERS 初学飞行调整与注意



- Check if the screws are firmly tightened.
- Check if the transmitter and receivers are fully charged.
- 再次确认螺丝是否锁紧?
- 发射器和接收器电池是否足够。



 
- Make sure that no people or obstructions in the vicinity.
- You must first practice hovering for flying safety. this is a basic flight action. (flight vehicle means keeping the helicopter in mid air in a fixed position)
- Please stand approximately 2m diagonally behind the helicopter.
- 确认临近地区没有人和障碍物。
- 为了飞行安全，你必须先练习停悬，这是飞行动作的基础（停悬：飞行器滞留空中并保持固定位置）。
- 练习时，请站在飞行器后方2公尺。

When arriving at the flying field.
请在没有人及障碍物的空旷室内、室外飞行



STEP 1 THROTTLE CONTROL PRACTICE 油门控制练习

Mode

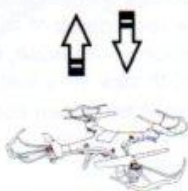

When the flight vehicle begins to lift-off the ground, slowly reduce the throttle to bring the flight vehicle back down. Keep practicing this action until you control the throttle smoothly.

当飞行器离地后，慢慢降低油门将飞行器降下，持续练习飞行器从地面上升和下降直到你觉得油门控制很顺。



- ① If the nose of the flight vehicle moves, please lower the throttle stick and land the flight vehicle. Then move your position diagonally behind the flight vehicle 2m and continue practicing.
- ② If the flight vehicle flies too far away from you, please land the flight vehicle and move your position behind 2m and continue practicing.
- ③ 当飞行器偏移时, 请降低油门并且降落, 然后移动到自己的位置到飞行器的正后方2公尺再继续练习。
- ④ 假如飞行器离你太远, 请先降飞行器, 并到飞行器后2公尺再继续练习。

STEP 2 RUDDER CONTROL PRACTICING 方向舵操作练习

1. Slowly raise the throttle stick.
2. Move the nose of the flight vehicle to right or left, and then slowly move the rudder stick in the opposite direction to fly back to its original position.

1. 慢慢升起油门摇杆
2. 将飞行器左右移动, 然后慢慢反向移动方向舵摇杆并将飞行器飞回原来的位置。


STEP 3

After you are familiar with all actions from Step 1 to 3, draw a circle on the ground and practice within the circle to increase your accuracy.

当你觉得Step1-3动作熟悉了, 在地上画圈并在这个圈的范围内容练习飞行, 以增加你的操控的准确度。

- ① You can reduce the size of the circle as you become familiarized with the control reflexes.

 
- ② 当你更加习惯操作动作, 你可以画更小的圈。

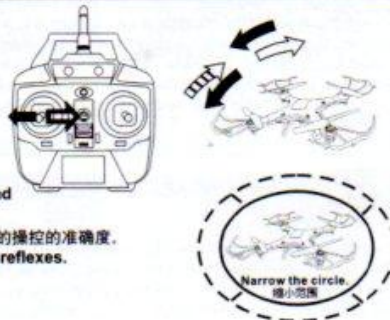

STEP 4 DIRECTION CHANGE AND HOVERING PRACTICE 改变直升机方向和练习停悬

After you are familiar with Step 1 to 4, stand at side of the Aircraft and continue practicing Step 1 to 4. Then repeat the Step 1 to 4 by standing in front of the Aircraft.

 当你觉得step1-4动作熟悉了站在面对飞行器侧边并继续练习step1-4. 之后, 站在飞行器前方重复步骤练习。

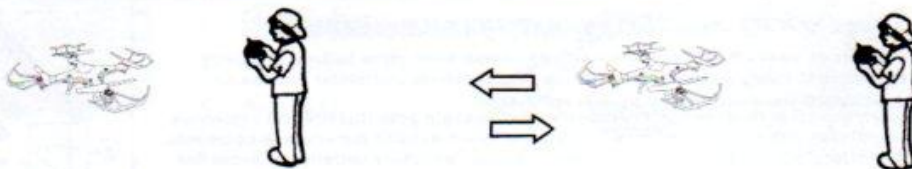

ADJUSTMENT OF EACH TRIM 飞行动作微调

Slowly raise the throttle stick and just as the Aircraft lift-off the ground, you can use the trim to correct the action if the Aircraft leans in a different direction.

慢慢升起油门摇杆, 当飞行器刚刚离开地面时, 若飞行器倾向不同方向, 可使用微调修正动作。

1. Adjustment of elevator trim 调整升降舵微调

Just before the helicopter lift-off, the nose lean forward/backward...

When leans forward, adjust the trim to down.

When leans backward, adjust the trim up.

在飞行器正要起飞时, 飞行器朝前/后方向偏移...

向前偏移时, 微调向下调整。

向后偏移时, 微调向上调整。

2. Adjustment of aileron trim 调整副翼微调

Just before the helicopter lift-off, the body lean left/right...

 
When leans right, adjust the trim to left side.

When leans left, adjust the trim to right side.

在飞行器正要起飞时, 飞行器朝左/右方向偏移...

向右偏移时, 微调向左调整。

向左偏移时, 微调向右调整。

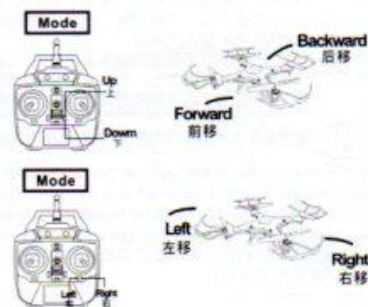




**Stable, flexible, flight routes,
Drift, 3D to roll easily**
飞行稳定、灵活、航线、
甩尾、3D翻滚动作轻松实现

- ★ You can play some thrilling action rolling surface current basic movements are skilled, then no amount of rudder upper right corner, remote controller beeps, then enter the 3D rollover state, then hit the remote control joystick in any direction to achieve 180-degree 3D roll. The right-hand lever is pressed into the 360-degree roll mode, press the remote control button to the upper right corner, hit the remote control joystick in any direction 360 degrees 3D roll. Long press the upper left corner of the remote control button, the remote issue beeps, then enter the return, and then struck the right joystick to cancel any of a key return; short press the upper left corner of the remote control button, the remote emit beeps, then enter headless mode, then press once to exit the headless mode.
- ★ 当前面的基本动作都很熟练时就可以玩一些惊险的翻滚动作,按一下遥控器右上角按键,遥控器发出滴滴声,此时进入3D翻滚状态,这时打遥控器摇杆任何方向实现180度3D翻滚。
把右手控制杆按下进入360度翻滚模式,按下遥控器右上角按键,打遥控器摇杆任何方向实现360度3D翻滚。
长按一下遥控器左上角按键,遥控发出滴滴声,此时进入返航,再任意拨动右手摇杆将取消一键返航;
短按一下遥控器左上角按键,遥控发出滴滴声,此时进入无头模式,再短按一次退出无头模式。
- ★ **Hinwels:** When the aircraft hover deviate more, the aircraft flat on a flat surface, the two joysticks on the remote control and hit the lower right corner in the end for about two minutes, then board the aircraft indicator flashes, the calibration is complete stop flashing, calibration carry out.
- ★ **注意:** 当飞行器悬停偏离较多时,把飞行器平放在平坦的地面上,把遥控器的两个操纵杆向右下角打到底约2秒钟,此时飞行器主板指示灯闪烁,校准完成后停止闪烁,校准完成。

8 .TROUBLE SHOOTING DURING FLIGHT 如何排除飞行中的状况

	Situation 状况	Cause 原因	Way to deal 对策
1	Receiver status LED blinks continuously for more than 4 seconds after helicopter battery inserted. No response to control input. 插上飞行器电池接收器指示灯持续闪烁,操作无反应	Unable to bind to transmitter. 遥控器与接收器未对频成功	Repeat the power up initializing process. (Refer to P.6: Binding of radio transmitter and receiver) 请从新执行遥控器与接收板的对频动作 (请参阅P. 6遥控器与接收器的对频)
2	No response after battery is connected to helicopter. 插上飞行器电池后飞行器没有任何反应	1.power to transmitter and receiver. 2.Check transmitter and receiver voltage. 3.Poor contact on battery terminals. 1. 检查遥控器和接收器是否接通电源 2. 检查遥控器和接收电池的电压 3. 电池极片接触不良	1.Turn on transmitter and ensure flight vehicle battery is inserted properly. 2.Use fully charged batteries. 3.Re-seat the battery and ensure good contact between battery contacts. 1. 打开发射器与确认插入飞行器电池至定位 2. 使用完全充电电池的电池 3. 从新插入电池, 确认电池和电池极片的接触是否正常
3	Motor does not respond to throttle stick, receiver LED flashes. 推动油门摇杆时马达不转,且接收器指示灯开始闪烁	Helicopter battery depleted. 飞行器锂电池电量不足	Fully charge the battery, or replace with a fully charged battery. 将电池充电或更换另一个充电的电池
4	Main rotor continue to spin after landing 降落之后,主旋翼仍在旋转未停止	Throttle trim accidentally increased during flight. 飞行中误将油门微调调高	Confirm throttle trim is in center or slightly below. 确认油门微调在中间位置或是稍微向下调
5	Main rotor spins but unable to takeoff. 飞行器主旋翼有持续转动但不能起飞	1.Deformed main blades. 2.Helicopter battery depleted 1. 主旋翼变形 2. 飞行器电池电量不足	1.Replace main blades 2.Charge or replace with a fully charged battery. 1. 更换主旋翼 2. 将电池充电或是更换另一个充电的电池
6	Strong vibration of helicopter 飞行器震动得很厉害	1.Deformed main blades 1. 主旋翼变形	1.Replace main blades 1. 更换主旋翼
7	Tail still off trim after tab adjustment, or inconsistent speed during left/right pirouette. 已调整方向微调,但机身仍会打转,左旋/右旋速度不一致	1.Damaged tail rotors 2.Damaged tail drive motor 1. 旋翼变形 2. 马达不良	Replacement of the main wing Replace the main motor 更换主翼 更换主马达
8	Helicopter still wonders forward after trim adjustment during hover. 飞行器会往前或往后偏移	1.Elevator servo not level during power up. 2.Elevator pushrod too long or too short. 陀螺仪中点不对。	The aircraft flat on a flat surface, while the two levers on the remote control to the lower-right corner for about 2 seconds to play in the end,when the aircraft-board LEDs flashing stops blinking after the calibration is complete, the calibration is complete. 把飞行器平放在平坦的地面上,同时把遥控器的两个控制杆向右下角打到底约2秒钟,此时飞行器主板指示灯闪烁,校准完成后停止闪烁,校准完成。
9	Can not fly the aircraft fall 飞行器跌落后续飞不起来	1. motor fall out 2. gear loosen 1. 电机脱落 2. 齿轮松脱	1. install the motor again 2. tighten the gear 1. 重新装回电机 2. 把齿轮紧固

 
9 .PARTS LIST 各种零件名称

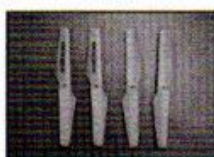

01
Blades
风叶



 
02
Body Shell
机身外壳

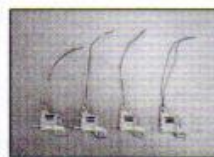


03
Motor
电机



 04
Protective frame
保护架

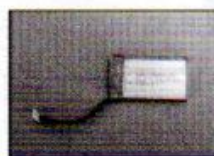


05
Battery
电池

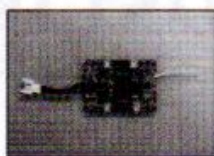 

06
RX
接收器



 07
Transmitter
遥控器

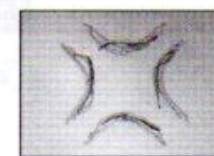

08
Lampshade
灯罩



09
Tripod
脚架

配送包：
一个USB充电器
两片风叶



The physical materials, specifications or parts of packaging within the specification for reference. The Company will not be responsible for this movement can not print the initiative to inform consumers of any updates or transaction.

本说明书内的材质，规格或零件包装之内物谨供参考。本公司将不对此印刷物之异动负责也无法主动通知消费者，任何更新或异动。

Warning

警告

- 1 Please keep up with the high-speed rotation of the propeller safe distance to avoid twisting injury, cuts the risk;
 - 2 motors for the heating components, do not touch, in order to avoid the risk of burns occurred;
 - 3 To ensure the requirements of aeronautical radio station (station) electromagnetic environment is prohibited in the center of the airport runway as dots, using various types of remote control model area within a radius of 5000m, the department published in a national radio control commands during regional area, should be required to stop using the model of the remote control;
 - 4 laser radiation, do as the direct beam;
 - 5 The model may contain small parts, choking hazard, not suitable for children under 3 years old;
 6. Packaging or instructions contain important information, should be retained.
1. 请与高速旋转的螺旋桨保持安全距离，以免发生绞伤、割伤危险；
 2. 电机为发热部件，请勿触摸，以免发生烫伤的危险；
 3. 为保证航空无线电台（站）电磁环境的要求，禁止在以机场跑道中心点为圆点，半径5000m的区域内使用各种类型模型遥控器，在国家有关部门发布无线电管制命令期间，区域区，应按要求停止使用模型遥控器；
 4. 激光辐射，勿视直射光束；
 5. 本模型可能含有小零件，有窒息危险，不适合3岁以下儿童使用；
 6. 包装或说明书中含有重要的信息，应保留。